


For use by trained tyre fitters ONLY

IMPORTANT
This machine is **NOT**
a bead breaker

PORTABLE FITTING KIT. **Fitting Instructions for 14" to 24" Bands**

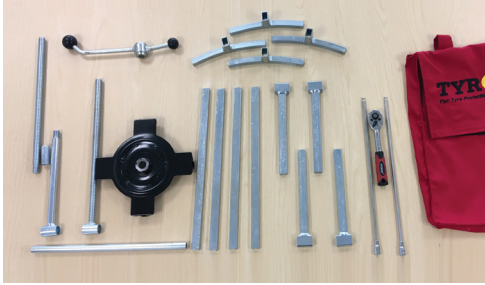

1. Contents of Portable Kit.



2. Assembled Portable Kit.



3. For car tyres, only break the front bead and place the T Rod under the back of the wheel.



4. For truck tyres, only break the back bead and place the longer T Rod with extension under the front of the wheel.



5. Assemble the Portable Frame, adjusting the feet width to suit and wind down the handle compressing the tyre and exposing the Wheel Well.



6. Fit the Multiband, making sure the fixing is located at the tyre valve.



7. Tighten the fixings to 7.5Nm car or 12Nm truck.

TYRON

Runflat

Tyron UK
Castle Business Park, Pavilion Way,
Loughborough, Leicestershire LE11 5GW
Tel: +44 (0)1509 377 677.
email: sales@tyron.co.uk
www.tyron.co.uk